





Design Driven Acoustics

## V NOTCH SHEET/TACK BOARD

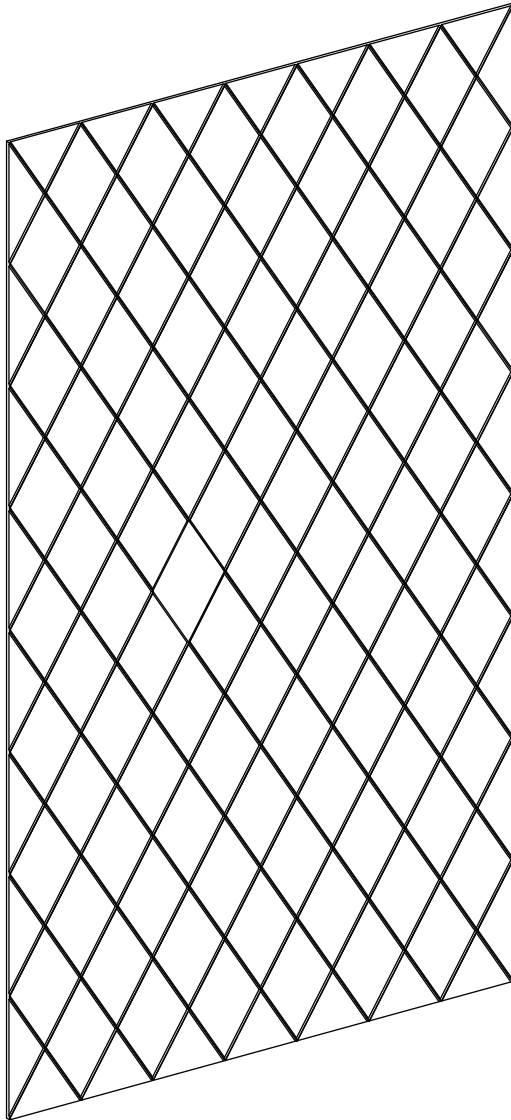

EZO TAPE

\*Images reflect typical hardware options. Please refer to packing list for items & quantities specific to your order.

**Thank you for your order!**


For questions or concerns regarding your order or installation please contact customer service at 1-844-441-1122 or via email at [sales@ayrsonics.com](mailto:sales@ayrsonics.com) (Canada) or [info@usa.ayrsonics.com](mailto:info@usa.ayrsonics.com) (USA)

[www.ezobord.com](http://www.ezobord.com)


# V NOTCH SHEETS/TACK BOARDS

## EZO TAPE

- 1** Apply EzoTape to outer edges of reverse side of product approximately 1/8" inset from edge
- 2** Apply EzoTape in vertical direction every 12-16" (16" for 9mm material; 12" for 12 mm material)
- 3** Use roller to burnish tape to ensure proper adhesion to Ezo

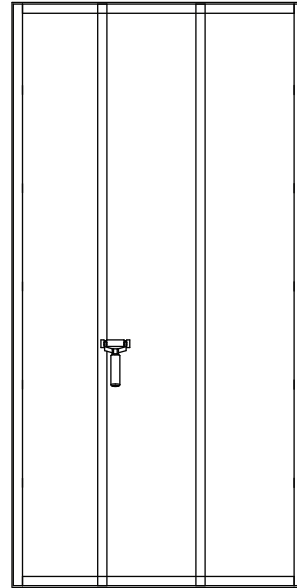

- 4** Locate placement on wall, level and mark with pencil
- 5** Remove paper backing from tape and apply to wall
- 6** Burnish Ezo with roller to ensure proper adhesion to wall

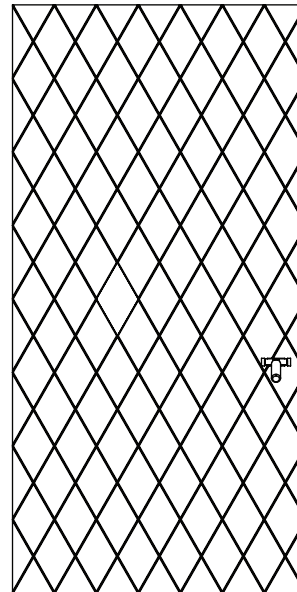

### Recommended Tools

Laser  
Level  
Roller  
Knife

ezoBord™

Design Driven Acoustics